

How to Setup Push Notifications via Mobile Application

Description

For push notifications to work you must have "Event/Motion" and or "Alarm" enabled From the "Device Manager" in the main menu of IDMSS/GDMSS plus application. Follow the step by step instructions below to setup push notifications.


Prerequisites

- Smartphone with IDMSS/GDMSS PLUS
- Connection and profile to the device
- Event such as Motion Detect must be enabled from Recorder.


Step by Step Instructions

iDMSS/GDMSS Plus Latest Version


1. Locate and launch iDMSS app on the iPhone.
2. Press on the menu icon and press on Alarm Manager.

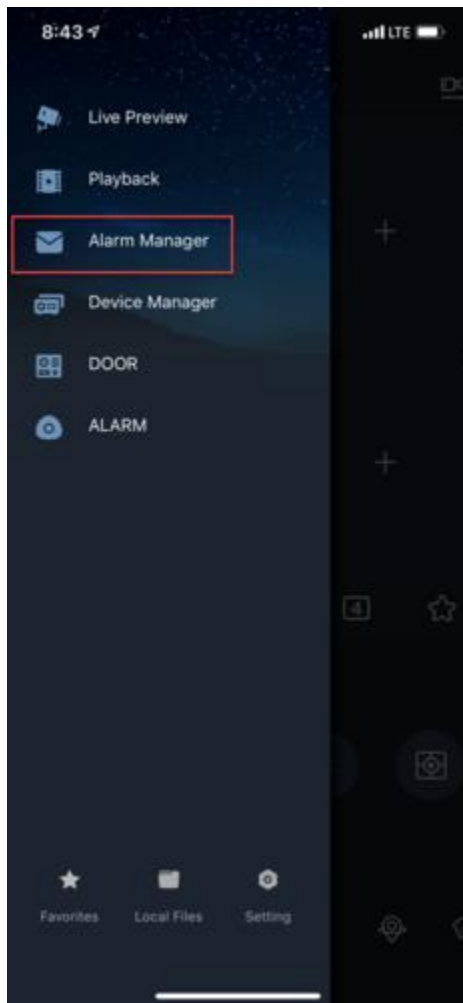


3. Press on Add alarm device icon.

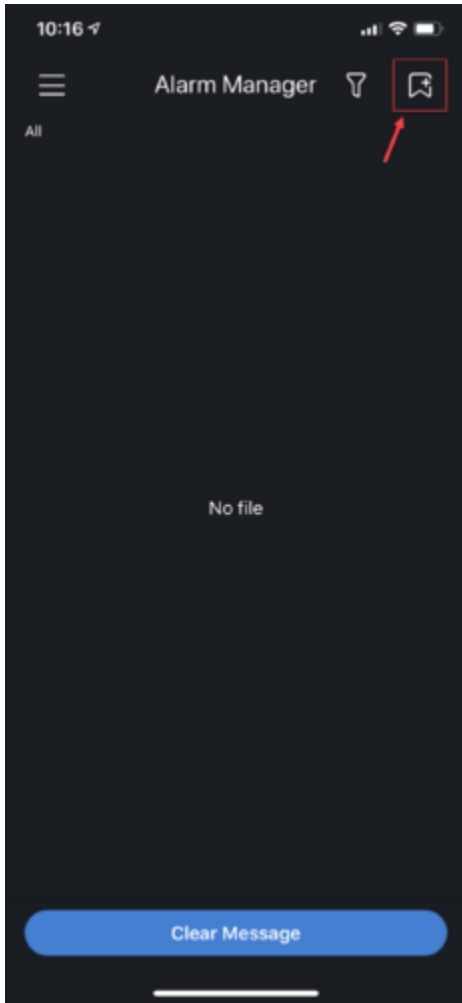


4. Select the added device.

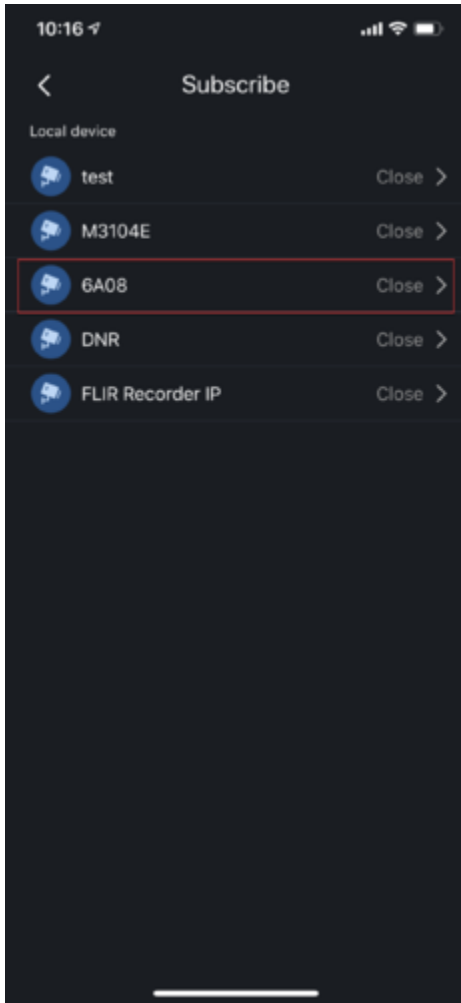

5. Enable the notification for that device by switching the toggle. It will show blue if on.

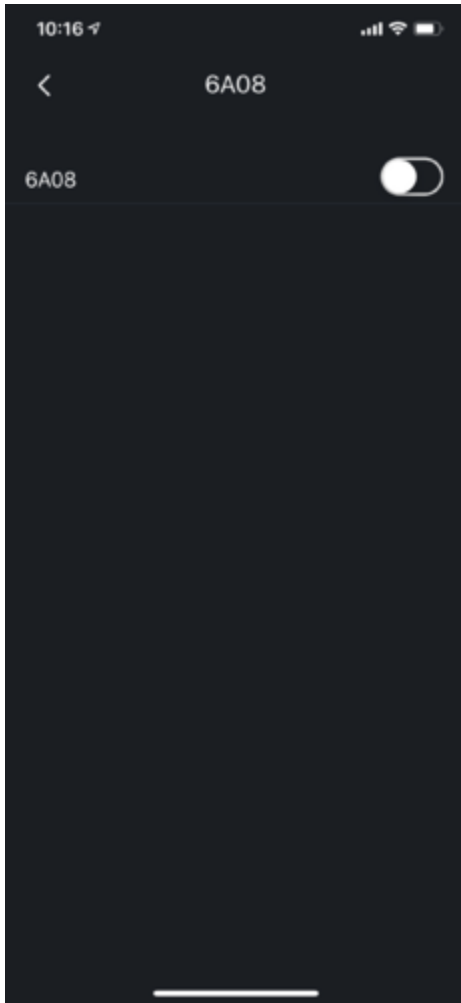



6. Select push type. For this tutorial, we are selecting Motion Detect > then press Motion detection > Select the camera channel.

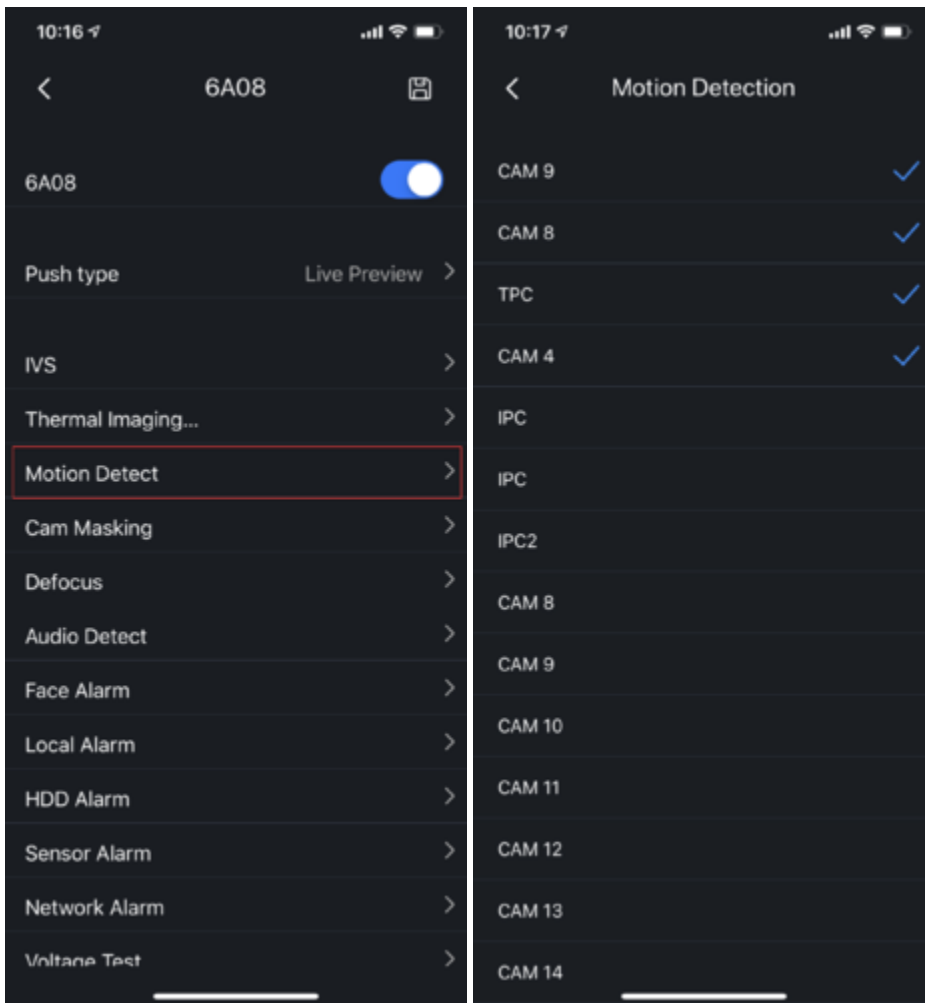

7. Go back to Push Type menu and press Save.




8. Your notification should be subscribe now on the app, you should receive notification when motion is triggered.

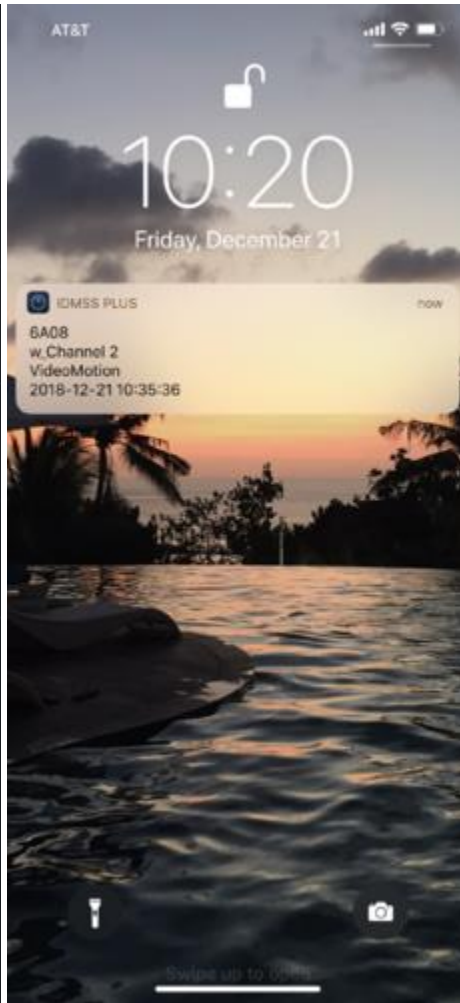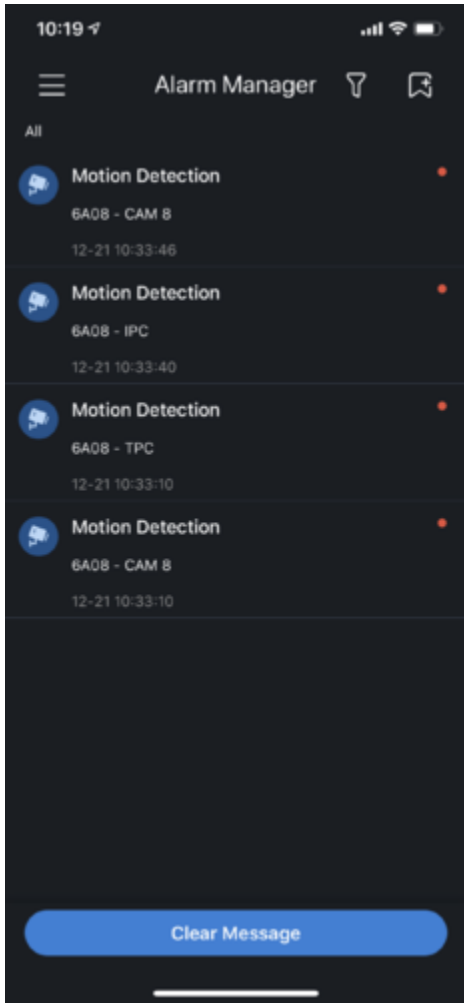


iDMSS old version


1. From Main Menu Select "Alarm Manager"

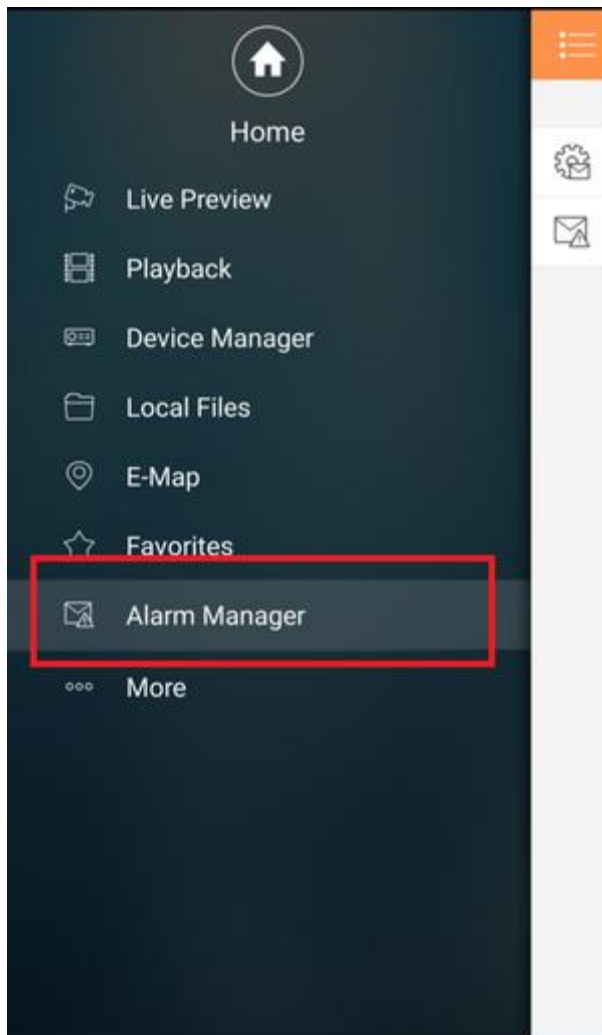


2. Select "Push Config"

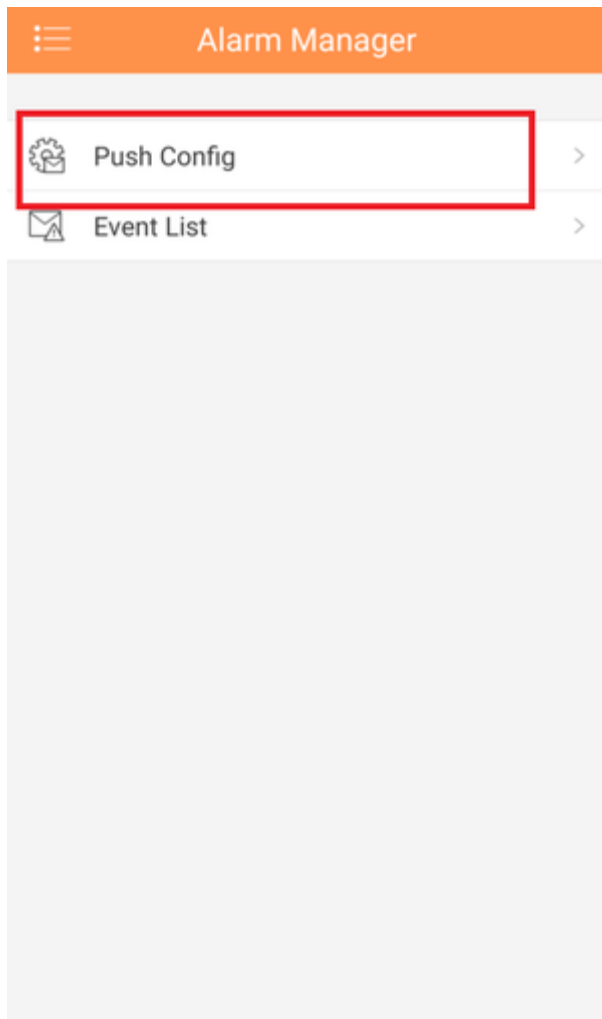


3. Select Recorder from list.

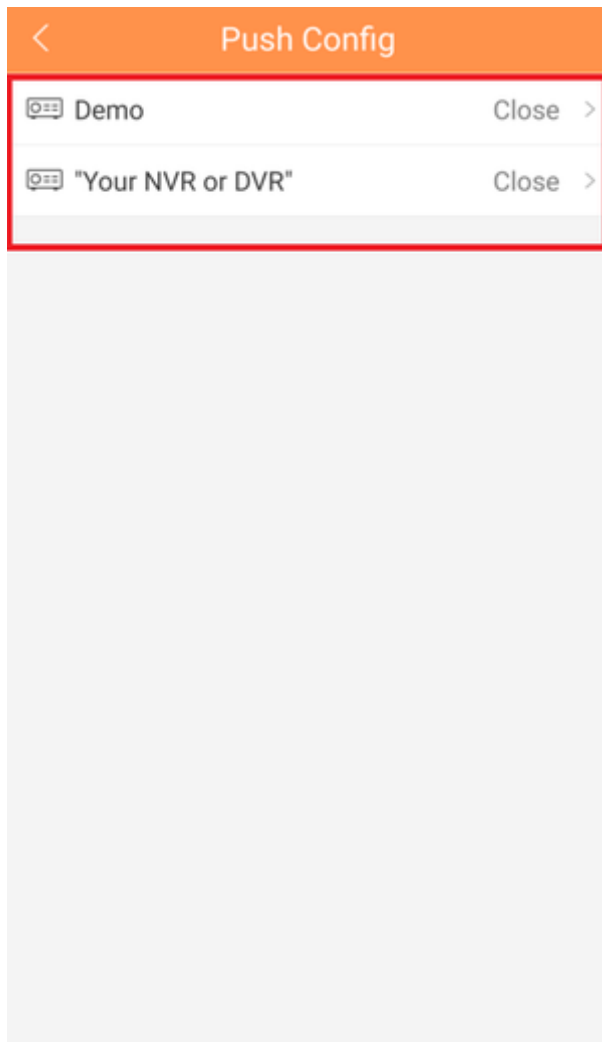


4. Select "Push Type" → Select one of the following: Live Preview, Video or Image → Select back icon.

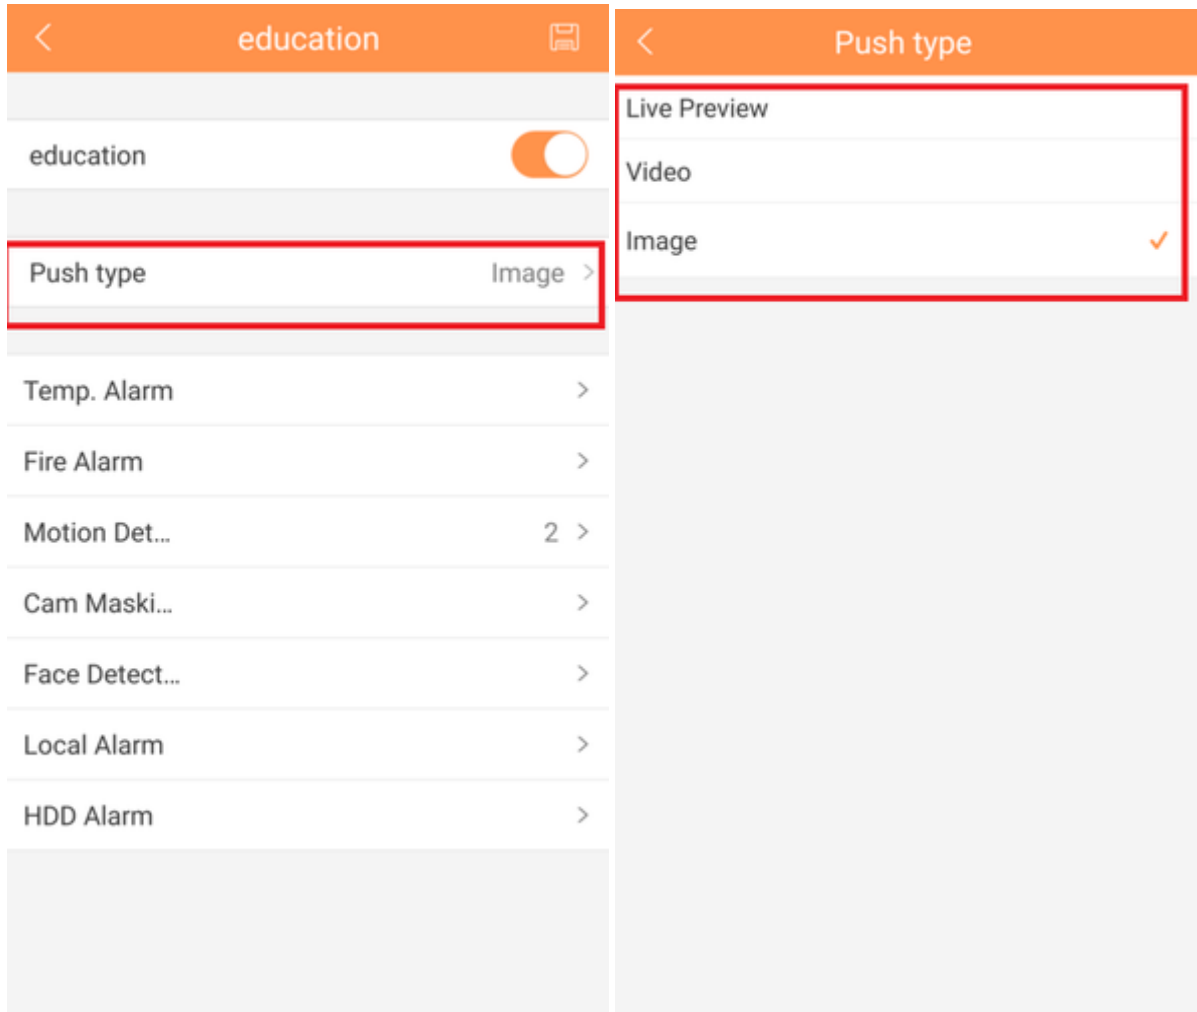

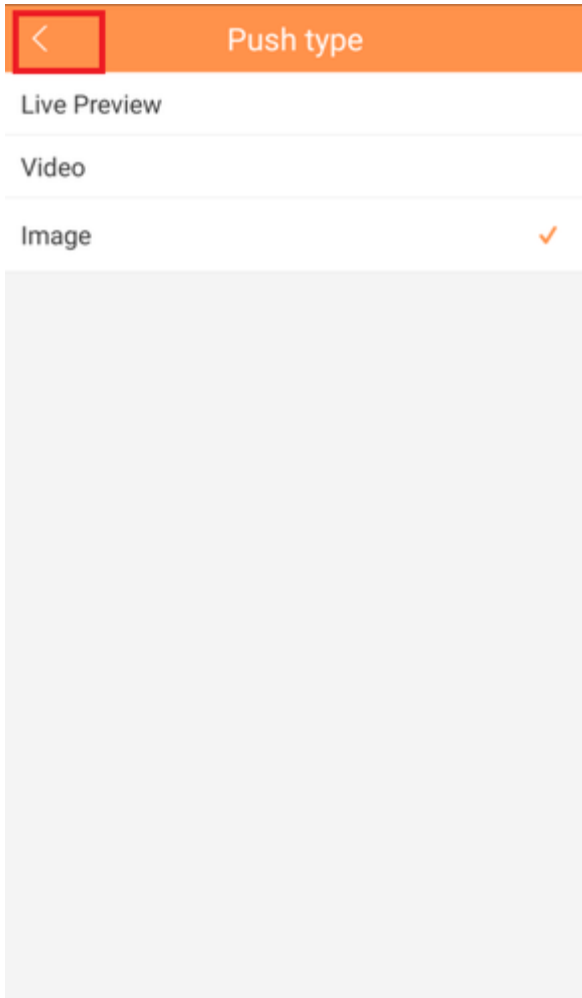

5. Select Alarm Type.

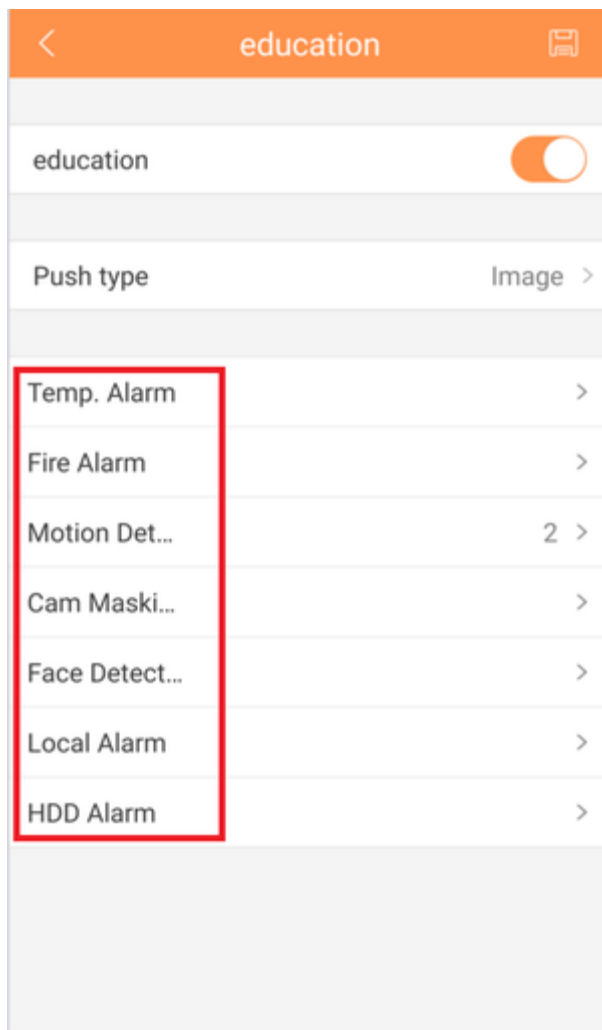

6. Select Camera or Cameras → Select back icon.



Motion Detect

2



IP PTZ Dome



Channel 8



Channel 9



CAM 5



IPC



IP PTZ Dome



CAM 3



CAM 5



Channel 10



Channel 11



Channel 12



Channel 13



< Motion Detect	
2	<input checked="" type="checkbox"/>
IP PTZ Dome	<input type="checkbox"/>
Channel 8	<input type="checkbox"/>
Channel 9	<input type="checkbox"/>
CAM 5	<input type="checkbox"/>
IPC	<input type="checkbox"/>
IP PTZ Dome	<input type="checkbox"/>
CAM 3	<input type="checkbox"/>
CAM 5	<input type="checkbox"/>
Channel 10	<input type="checkbox"/>
Channel 11	<input type="checkbox"/>
Channel 12	<input type="checkbox"/>
Channel 13	<input type="checkbox"/>

7. Select Disk icon to subscribe entry.

education

Push type Image >

Temp. Alarm >

Fire Alarm >

Motion Det... 2 >

Cam Maski... >

Face Detect... >

Local Alarm >

HDD Alarm >

